

 


**Main gate valve switch
(the RP switch is just beside)**



**Rotary pump
gate valve**

Small gate valve



1. Close main gate valve
2. Close the 2 small gate valves connecting the pumps to the pipe
3. Close rotary pump gate valve
4. Switch off the rotary pump
5. Switch off the turbo pump
6. Switch of the turbo pump controller once the velocity has gone down to zero
7. Switch off the gauge

turbo pump switch



1. BS rotary pump switch is in the electric panel in the bottom of the stairs (the one on the left)
2. To stop the compressor in the elecshop first turn the red knob perpendicular to the pipe and then turn the compressor off

