

1) Restart air conditioners


2) Restart dehumidifiers



3) Switch on these buttons in the panels located in the end, middle and center vacuum station

4) Start rotary pump

5) Open the small gate valve between rotary pump and pipe

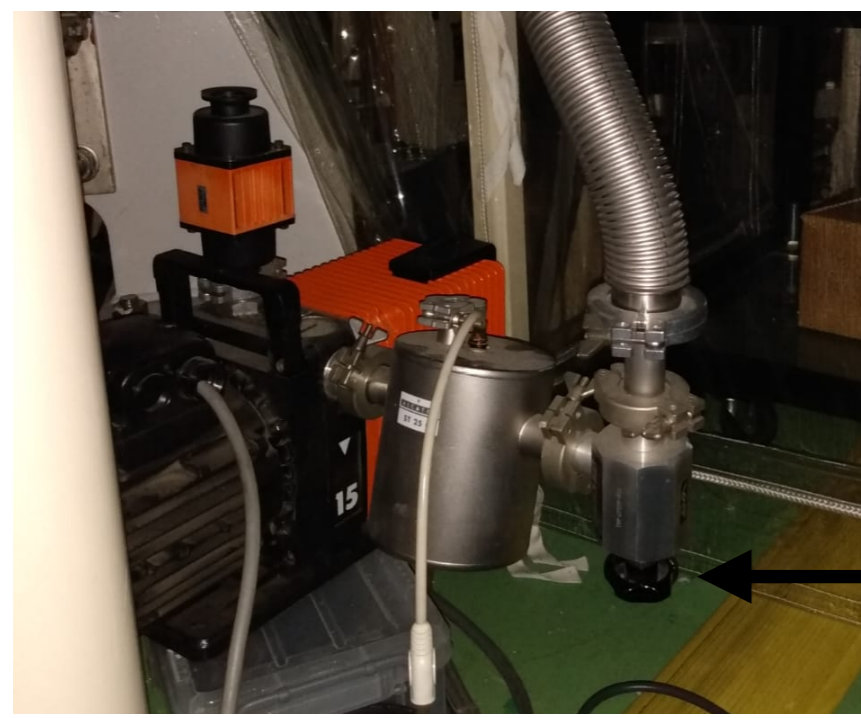

This is the one for BS RP

6) Start turbo pump

7) Start Penning



8) Wait until turbo pump gets to nominal frequency and then open the others gate valves

9) Remember to switch on the compressor in the elecshop