

Read X Y DC Freq.vi

Reads all the available parameters from the instrument.

Note:

This VI only reads multiple parameters, not multiple points of the same parameter.

